

LCD-show Raspberry Pi

Projektseite: <https://github.com/Lcdwiki/>

Um das Minitouchdisplay zu aktivieren:

Raspberry Pi Stand 10.2022

```
rm -rf LCD-show
git clone https://github.com/Lcdwiki/LCD-show.git
chmod -R 755 LCD-show
cd LCD-show/
./MHS35-show
```

Ubuntu Ports ARM 22.04 Stand 10.2022

```
rm -rf LCD-show-ubuntu
git clone https://github.com/Lcdwiki/LCD-show-ubuntu.git
chmod -R 755 LCD-show
cd LCD-show-ubuntu/
./MHS35-show
```

From:
<http://www.osit.cc/dokuwiki/> - DEEPDOC.AT - enjoy your brain

Permanent link:
http://www.osit.cc/dokuwiki/doku.php?id=server_und_serverdienste:lcd-show_raspberry_pi&rev=1666979402

Last update: 2025/11/29 22:06

